

Pillow Talk







INSTALLATION INSTRUCTIONS

BAILEY EXTENDABLE ROD SET

You will need

• Tape measure • Pencil • Drill bits • Power drill • Phillips head screwdriver • Hammer • Level

Rod Set includes:

| | | | | | |
|---|--|---|---|--|---|
| (A)  2 x Finials | (B)  3 x Brackets | (C)  3 x Set screws (To secure pole to bracket) | (D)  6 x Wall mounting screws | (E)  6 x Wall plugs | (F)  2 x Rods (28mm diameter) |
|---|--|---|---|--|---|

INSTALLATION INSTRUCTIONS:

1. Determine how high to position the rod by using the guide on page 2.
2. Using the rod width guide on page 2, measure and mark bracket locations on the wall where the screws will go. To position the centre bracket, measure halfway between the two end brackets. Use a level to ensure the marked bracket locations are straight.
3. Drill the screw holes and insert wall plugs (if necessary). Secure brackets (B) to the wall using wall mounting screws (D). Secure all brackets loosely first, then fully tighten screws once the brackets are in place to make sure the brackets are level and flush against the surface. Use a level to ensure the brackets are straight.

If you are installing brackets into:

(i) Wood



Use mounting screws to fix brackets. Wall plugs are not needed for wood.

(ii) Brick or concrete

Use a power drill to pre-drill holes into the wall. Lightly hammer wall plugs (E) into these holes. Fix brackets with mounting screws (D).


(iii) Plasterboard

Fixings for other types of walls are available from hardware stores.

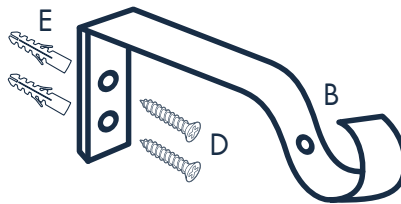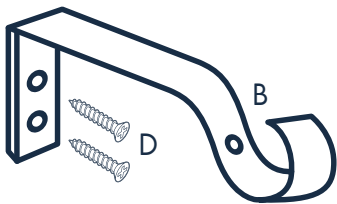

4. Slide curtains onto your rod (F) either through the eyelet rings, fabric tabs, or pole pocket.
5. Attach finials (A) on each end of the rod. Place rod in brackets and tighten the set screws (C) with a screwdriver to prevent the rod from moving while drawing curtains.

DETERMINE ROD HEIGHT

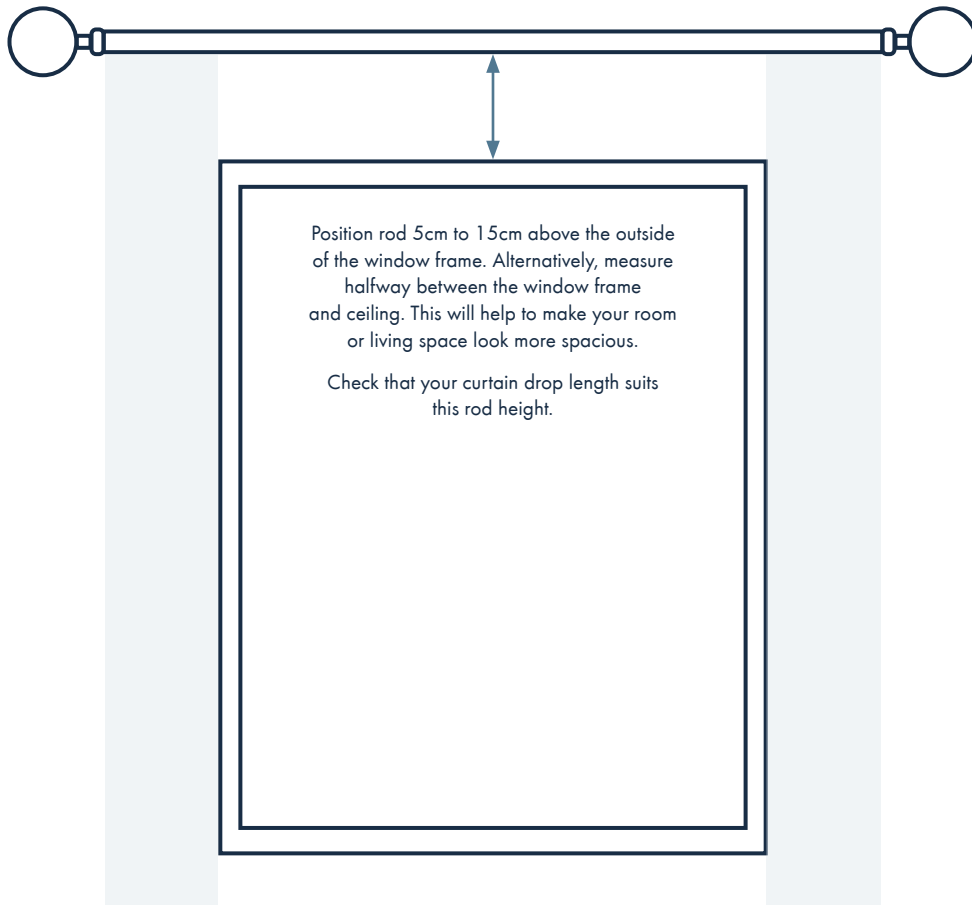

DETERMINE ROD WIDTH

